



1. When entering the website after logging in, Press “Download Sender” to start the downloading

The screenshot shows the MASCorp Diagnostics website dashboard. At the top, it says "Logged in as:" followed by navigation buttons for "My Profile", "About Us", "Policy", "Support", "Donate", and "Logout". A blue badge in the top right corner indicates "2 Credits". Below this, a dark blue box contains the text "\$10 per credit • 1 credit = 1 file analysis or 1 real-time session (1 credit on entry to live diagnostics; all CAN buses included)". The main content area is divided into two columns. The left column has a blue button labeled "File Analysis" with the subtext "Upload and analyze log files". The right column has a dark blue button labeled "Live Diagnostics" with the subtext "Real-time data streaming and analysis. 1 credit on entry. 3 hours per session, all CAN buses included." Below these is a section titled "EV Sender Application" with the subtext "Download the Sender application to connect your PCAN adapter and stream live CAN bus data". This section contains four buttons: "Download Sender" (highlighted with a red box), "Instructions", "Sender installation manual", and "Adapters".


2. After installing the executable, run it

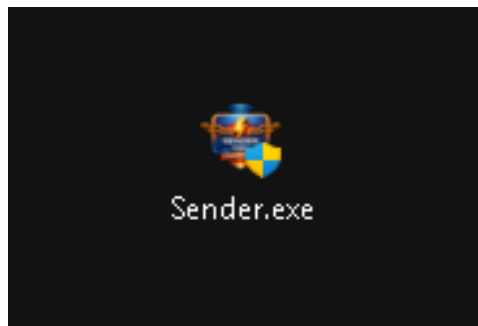


3. Then the Smart Screen window will appear, press “More Info” and then the “Run anyway” button to start the installation

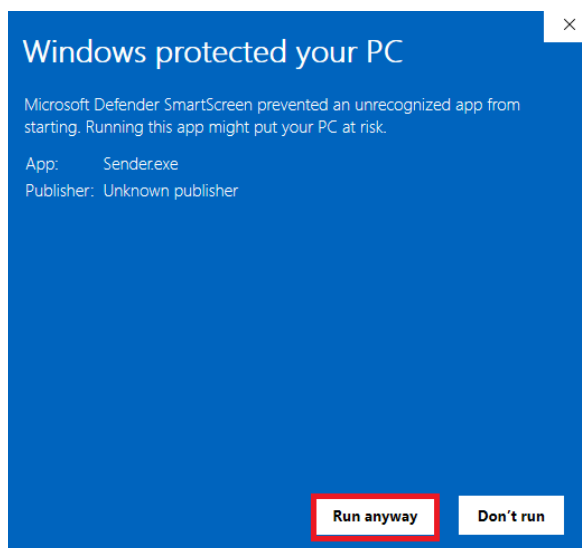


4. First press the Checkbox and then press “Accept”

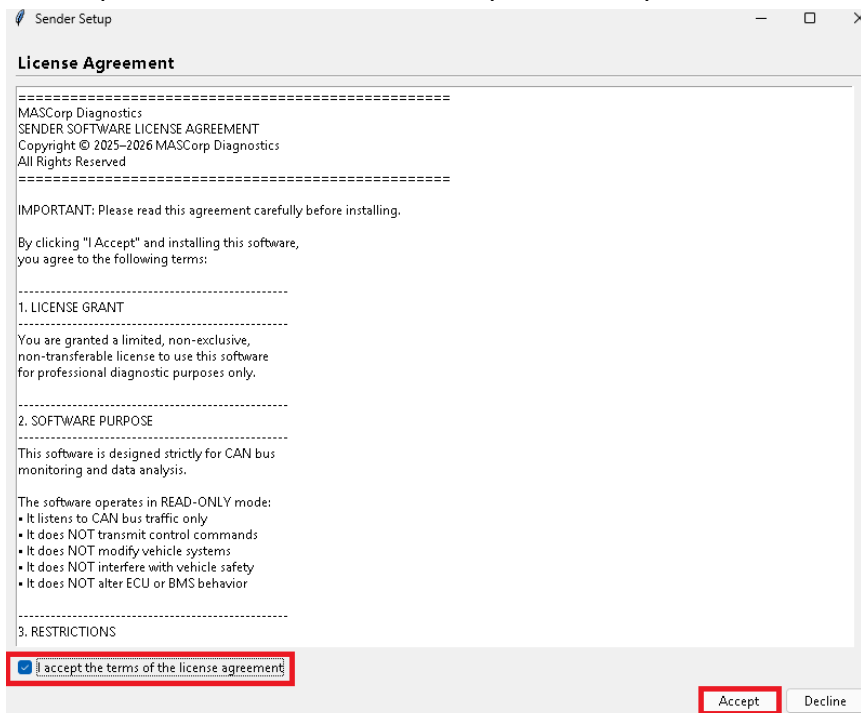


5. You have to install Python in order for the platform to work, press the Checkbox and then “Next”

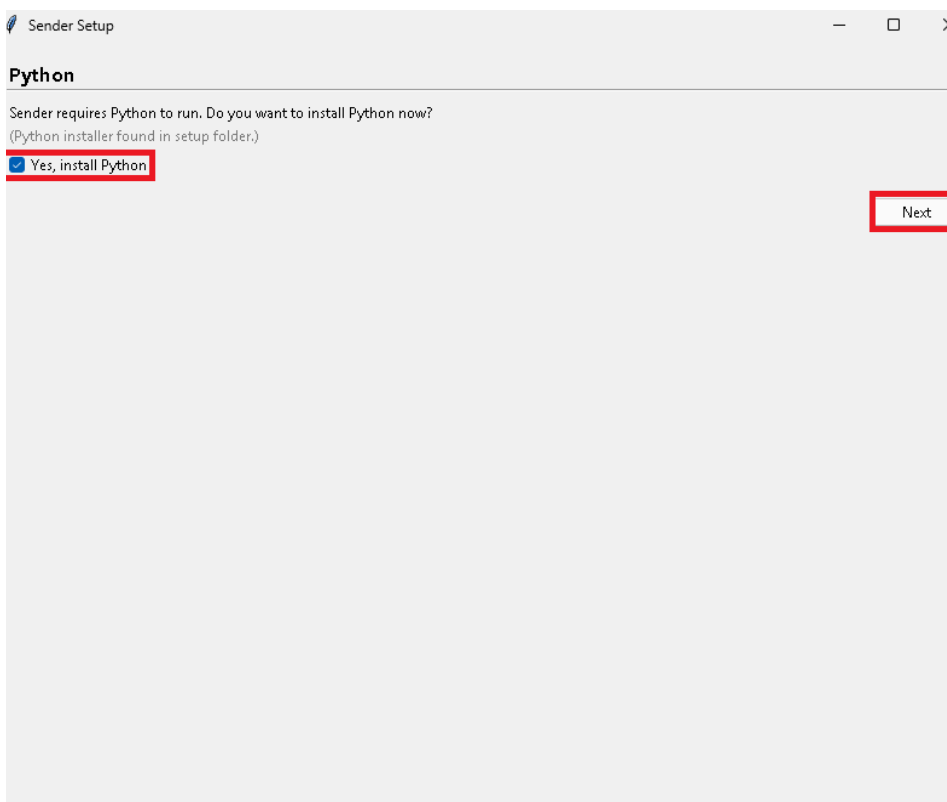


6. Same procedure for PCAN Drivers, press the checkbox and press “Next”

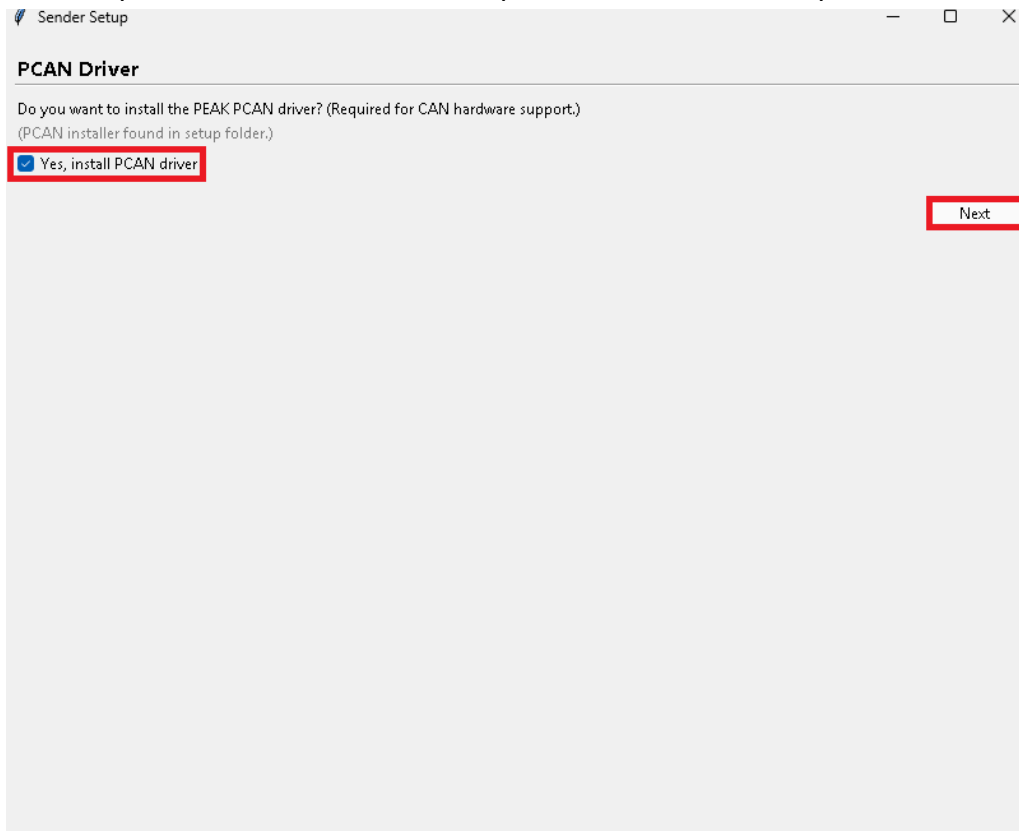

7. When installing Python, make sure these 2 checkboxes are pressed, then press “Install Now”

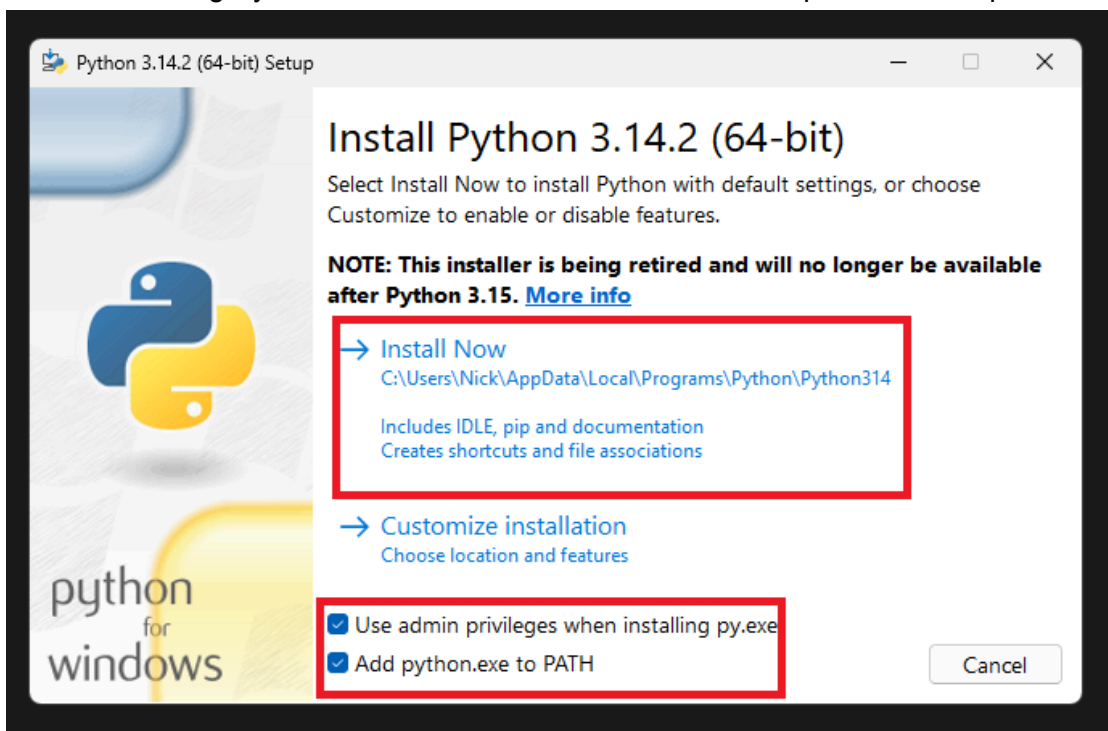


8. After installing Python, it will automatically open PEAK Drivers, press "Next"

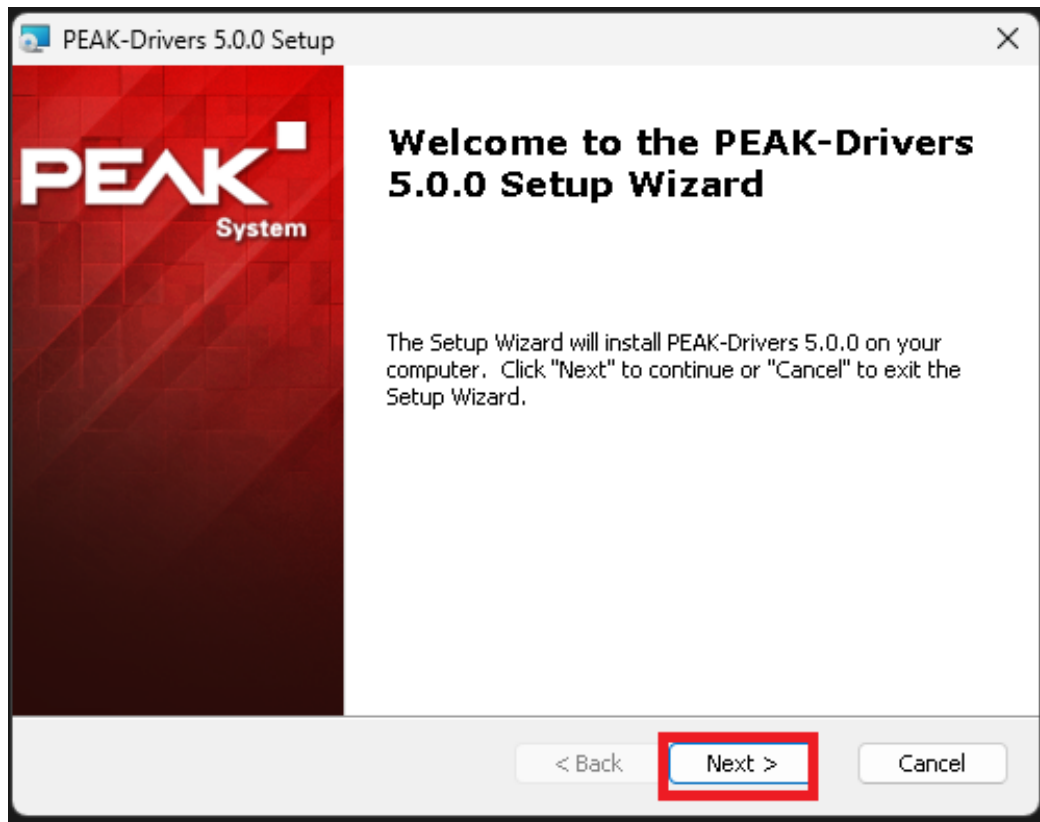


9. Here, press "I accept the terms in the License Agreement" and then press Next




10. Here, you don't press anything except "Next"

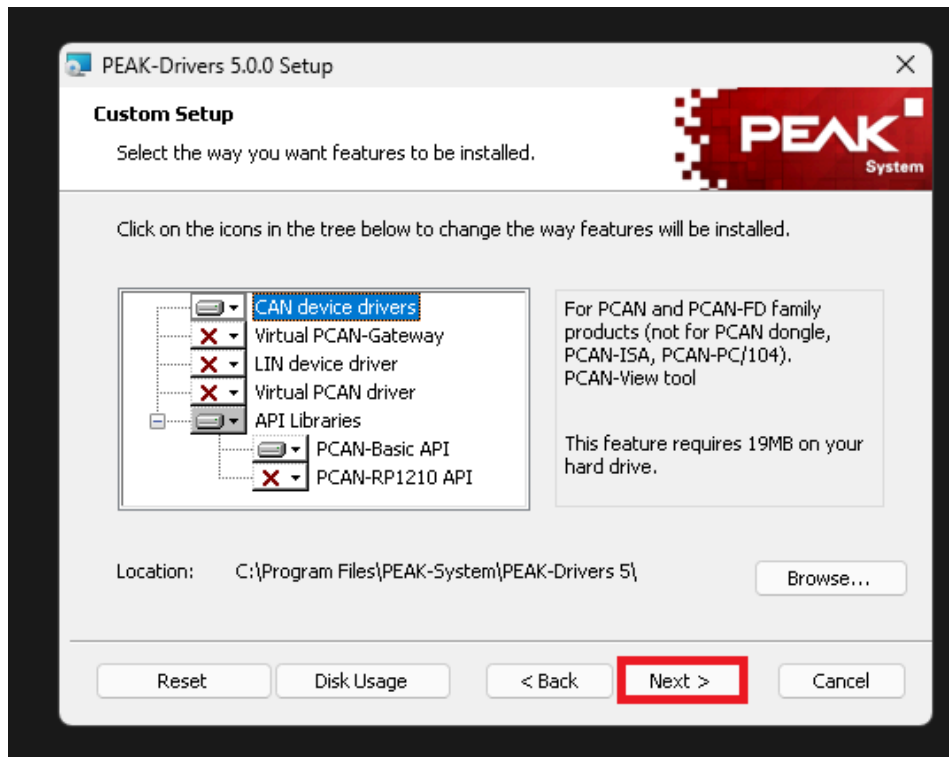


11. Press "Install" to start the driver installation

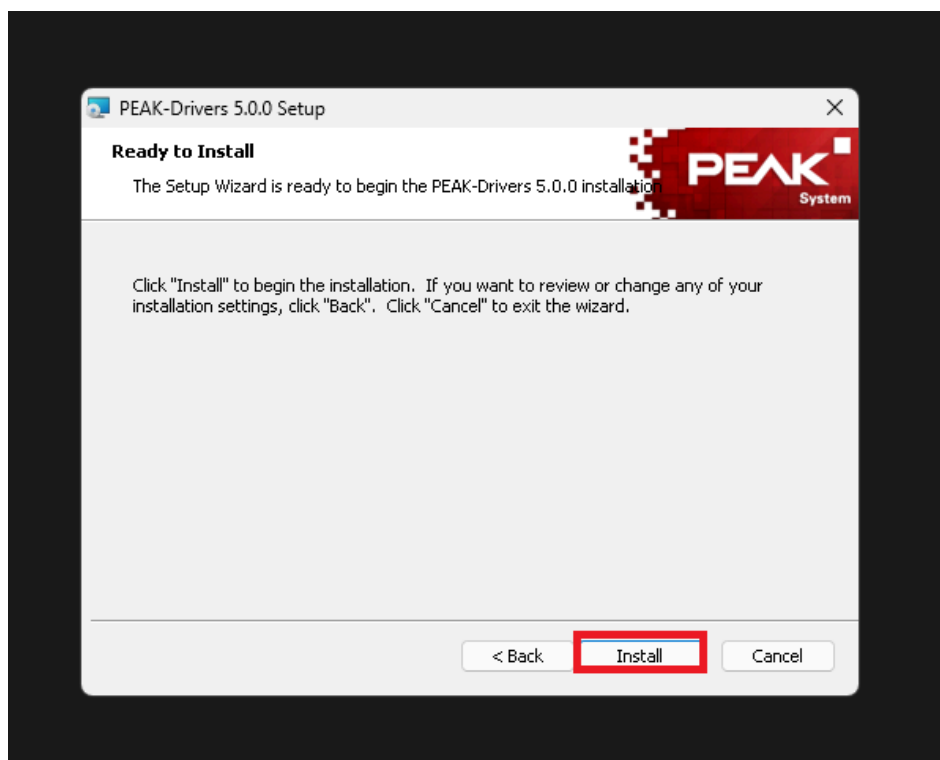


12. After installation is complete, press "Finish"

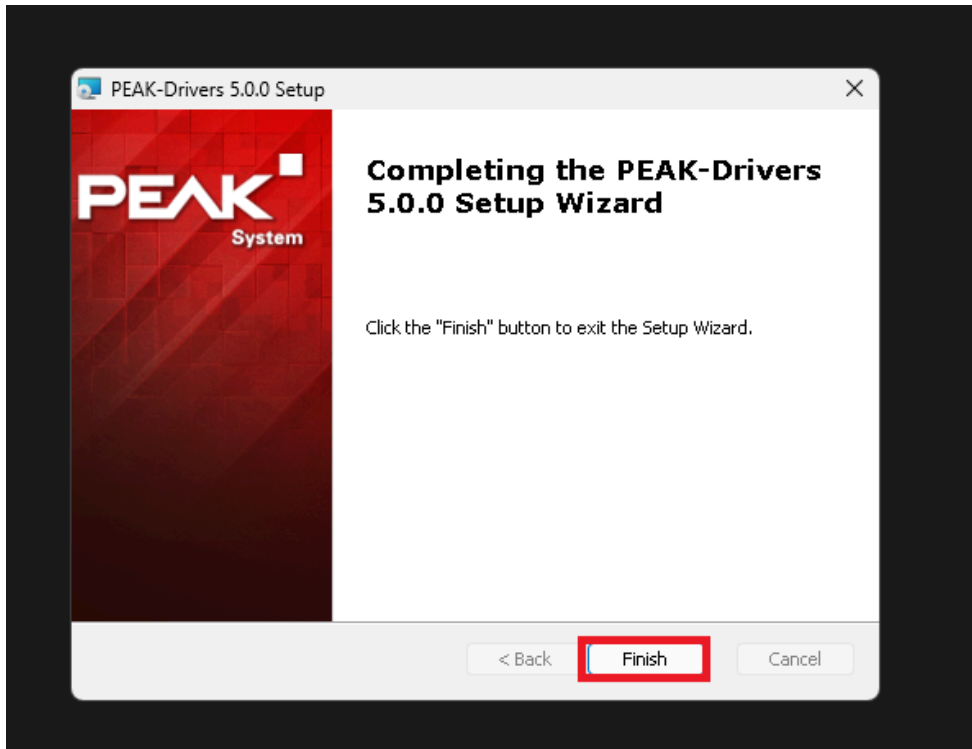


13. This windows shows that installation is complete, confirm both windows

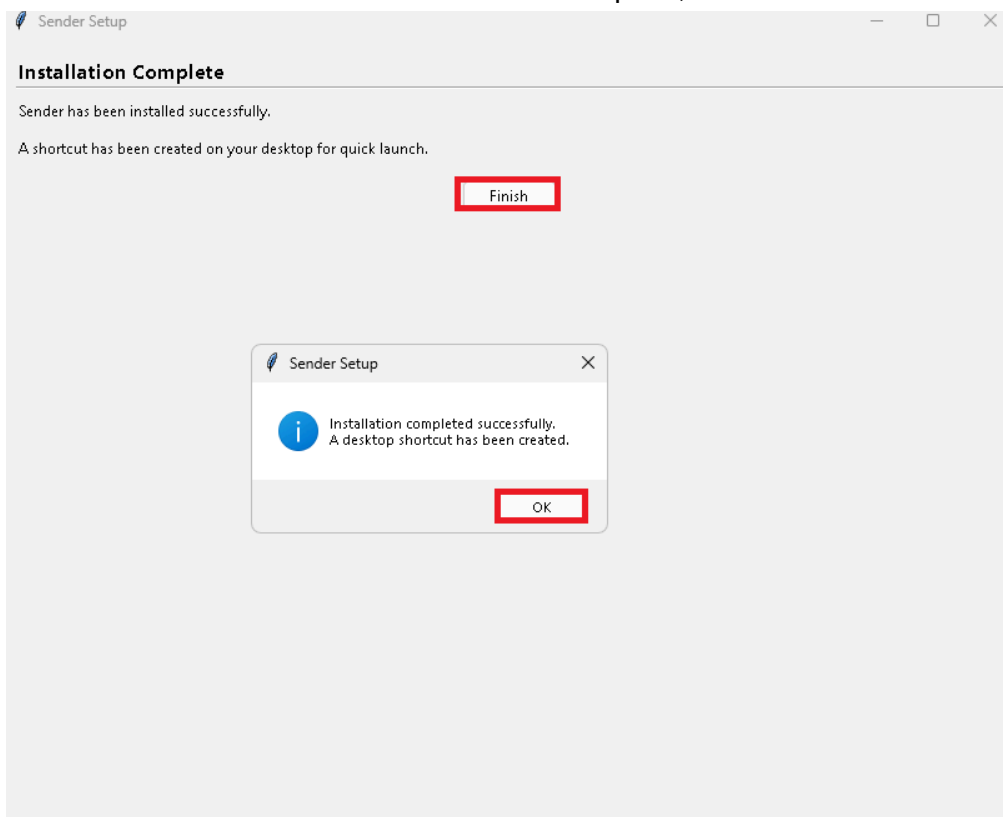


14. Check your desktop for the “Sender” Shortcut, and to run it by double clicking it and wait for it to load.

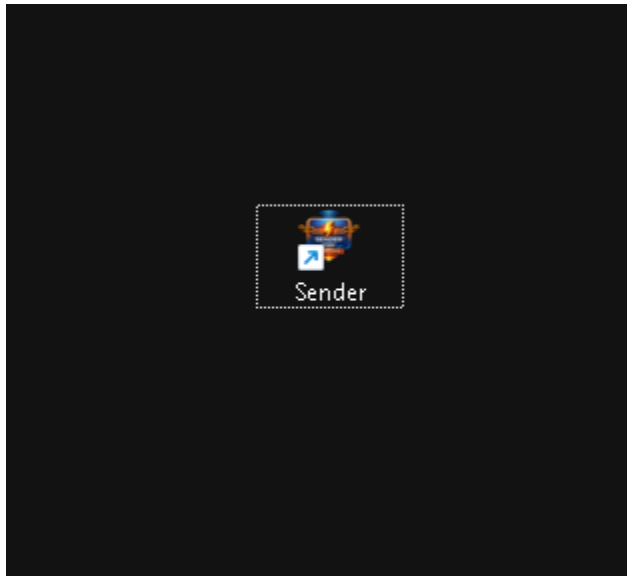

15. After running the shortcut, you can start filling out your log-in credentials then press “Sign-in”

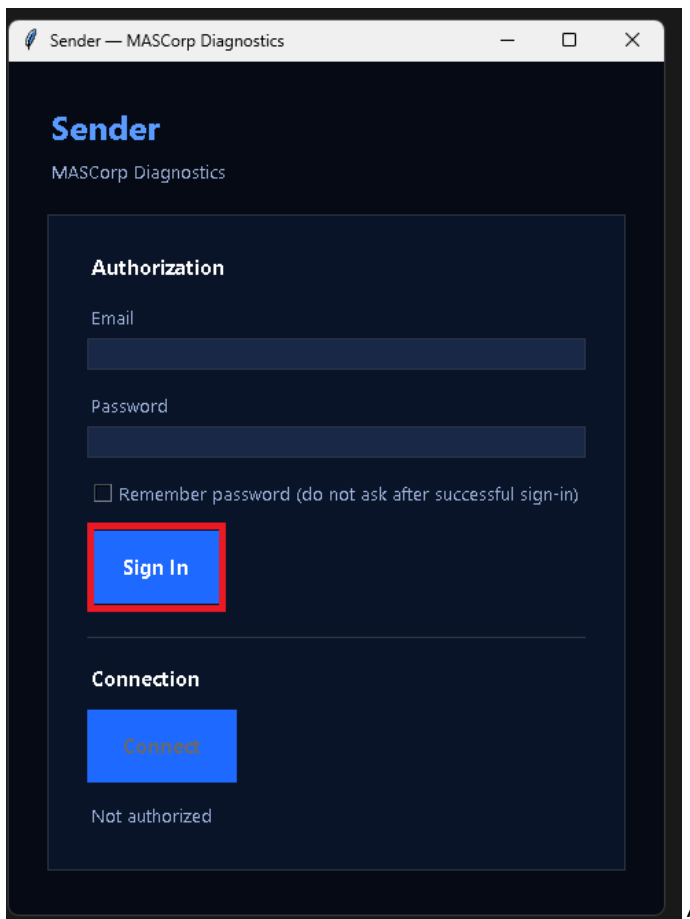

16. After successful sign-in, now you can connect your device to the platform by pressing “Connect”

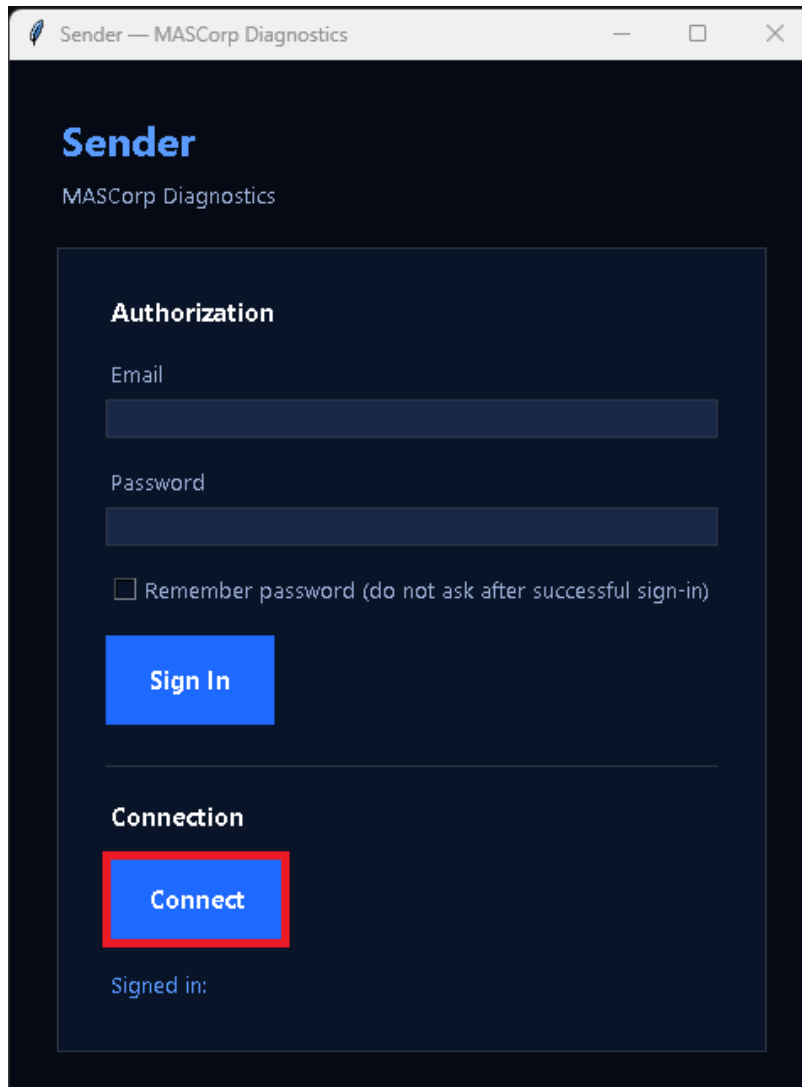

The image shows a web browser window titled "Sender — MASCorp Diagnostics". The page content includes the "Sender" logo and "MASCorp Diagnostics" text. Below this is a dark-themed form with two sections: "Authorization" and "Connection". The "Authorization" section contains fields for "Email" and "Password", a checkbox for "Remember password (do not ask after successful sign-in)", and a blue "Sign In" button. The "Connection" section features a blue "Connect" button, which is highlighted with a red rectangular border. Below the "Connect" button is the text "Signed in:".